

Safe instructions

The hotel offers two types of safes:

White safe

Programming your own 6-digit code:

- Press A when the door is open.
- Enter your own code (such as your date of birth) within 10 seconds.
- Confirm the code by pressing C.
- Close the door and turn the knob to the left.

Opening and closing the safe with your own code:

- Press the A button.
- Enter your 6-digit code.
- Turn the knob to the right.

You can lock the door by closing it and turning the knob back to the left.

Please note:

If the door is open longer than 5 minutes, the code is automatically erased and the code must be reprogrammed. Please leave the door of the safe open upon departure, so that the next guest can program their own code.

Black safe

- Come up with your own 6-digit code.
- Close the door of the safe and enter your code.
- Then press LOCK. The safe will now lock itself.

To open the safe, simply enter your own 6-digit code again, and the safe will open.

You have to reprogram the code every time you open the safe.

