

Television and radio instructions

Selecting radio programmes via the remote control.

Using your TV, you can choose from many pre-programmed radio stations in consecutive sequence. The screen will display the programme number and selected channel.

You will find a complete list of television and radio stations and their channel numbers in another document.

Selecting television programmes via the remote control.

Using the blue “programme + or -” button, you can choose from many pre-programmed television programmes in consecutive sequence. The programme number will be displayed on the screen. You can open the digital TV guide by pressing “Guide”. You can change the channel number directly with the number buttons.


On Texel, around 60 TV channels are provided by the cable company. Here you will find a complete list of television and radio stations and their channel numbers.

Volume control for radio or television.

You can change the volume with the blue - + keys in the middle of your remote control. Press the + button to turn up the volume and - to turn the volume down. The volume setting is indicated by numbers 00 to 20.

Please show consideration for the other guests when using the radio and television.

Smart TV

Your TV is connected to the internet. Open the menu using the “Smart TV” button  on your remote control. This way, you can watch missed programs, check your Facebook status or watch YouTube videos. You can navigate through the menu with your remote control.

If you have access to a Netflix account, you can also watch movies and TV shows.

